


L



© 2011 Pearson Education, Inc. or its affiliate(s). All rights reserved. Pearson Education, Inc., 501 Boylston Street, Boston, MA 02116



--	--	--	--

--	--	--	--





Label Explanation

LIGHT

Light Electronics CO., LTD.

MODEL NAME:

QUANTITY:

BIN:

PACKING DATE:

REMARKS:

LOT NO. :

LIGHT

Light Electronics CO., LTD.

MODEL NAME:

QUANTITY:


BIN:

PACKING DATE:

CUSTOMER P/N:

LOT NO. :


Reel Dimensions

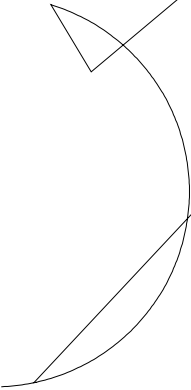

--	--	--	--

--	--	--	--

Suggest IR Reflow Condition For Lead Free

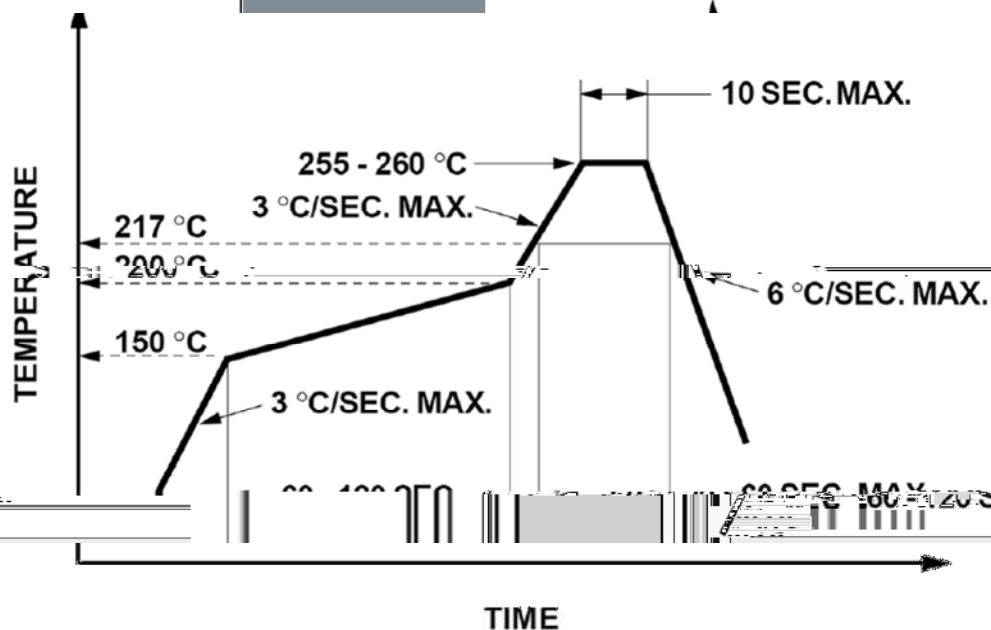

1. Reflow soldering should not be done more than two times.
2. When soldering, do not put stress on the LEDs during heating.

Soldering iron

1. When hand soldering, the temperature of the iron must less than 300 °C for 3 seconds.
2. The hand solder should be done only once.

Repairing

Repair should not be done after the LEDs have been soldered. When repairing is unavoidable, a double-head soldering iron should be used (as below figure). It should be confirmed beforehand whether the characteristics of LEDs will or will not be damaged by repairing.

